

# EIGHTY TWO™

## User Guide

### HEADREST [OPTIONAL]

The headrest is height adjustable, and pivots forward and backward to find optimal comfort.

### BACK [MESH]

Standard M11 mesh is a lightweight yet durable sheer-style fabric available in 4 colors.

### LUMBAR

The lumbar is able to move up and down to create necessary lower back support.

### SEAT SLIDER [OPTIONAL]

To adjust the seat depth, pull the paddle up to unlock it and adjust to the desired position. Release the paddle to lock in position.

### FINISHES

Available in black finish, with the option of a black or polished aluminum base.

### CASTERS

Standard black carpet casters, or optional hard surface casters.

### ARMS

To adjust the height, press the trigger on the inside of the arm, adjust to desired height and release. Also available with a fixed arm or height-adjustable arm with pivoting arm cap.

### TILT TENSION + LOCK

For tension, adjust by turning tension knob clockwise to tighten and counterclockwise to loosen. To lock the recline of the backrest, lean back to the desired position, push the tilt lock lever down to lock in place. To release, pull the lever up to unlock.

### HEIGHT ADJUSTMENT

For desired seat height use the lever under the right side of the seat. To raise the seat, lift the lever up while taking your weight off the chair. To lower the seat, stay seated and lift the lever. Release the lever when you reach the desired height.

