


These disassembly instructions are also application to DOVE Scooter Stool.



 For material recycling information please refer to the End of Life Recovery Matrix and List of Recycling Facilities, which is available at www.allseating.com.

**These disassembly instructions are also application to DOVE Scooter Stool.**

Tools: #2 #3 Phillips head, Rubber mallet or hammer.
Skill Set: Good manual dexterity.
Estimated Time: 12min per chair.

Steps:**1. Back Rest - 2min**

In Dove chair, fasteners are exposed at the rear of the back rest. Locate the two fasteners and unfasten. Remove the back rest.

2. Back Bar - 1min

Once the back rest is removed, locate 3 fasteners located underside of the mechanism and unfasten. Remove back bar from the mechanism.

3. Casters - 2min

Lay chair on back. Grasp and pull to remove casters from the base.

4. Base - 2min

Hold the base legs firmly and strike the bottom of cylinder with a hammer until base comes loose, remove base.

5. Cylinder - 1min

Remove cylinder by placing one hand on can of cylinder and hit the bottom of the mechanism with hammer until cylinder separates from mechanism.

6. Mechanism - 2min

Turn the chair upside down so the bottom is visible. Locate the four fasteners located on the underside of the seat pan or seat slider and unfasten. Remove mechanism from the seat pan or seat slider.

7. Seat - 2min

Turn the chair upside down so the bottom is visible. Locate the four fasteners located on the underside of the seat pan and unfasten. Remove seat from the mechanism.