

Disassembly Instructions PRATA

Document No: CDM-36 Issue Date: 17-May-21

Revision: Revised Date:

This disassembly instruction is applicable to PRATA Chair. Backrest (Foam, Metal, Plastic) Seat (Foam, Wood) Shroud (Plastic) Under Mechanism & Cover (Metal) Under Base Cylinder (Metal) (Metal) Caster (Plastic with Metal)

For material recycling information please refer to the End of Life Recovery Matrix and List of Recycling Facilities, which is available at www.allseating.com.



Disassembly Instructions PRATA

Document No: CDM-36 Issue Date: 17-May-21

Revision: Revised Date:

Tools: #2 #3 Phillips head, Rubber mallet or hammer, Small flathead screwdriver, Allen key, Box cutter.

Skill Set: Good manual dexterity **Estimated Time**: 10 minutes per chair

Steps:

- 1. **Base** Turn the chair upside down. Hold the base legs firmly and strike the bottom of cylinder with a hammer until base comes loose, remove base. **1min**
- 2. Casters Grasp and pull to remove casters from the base. 1min
- 3. **Cylinder** Remove cylinder by placing one hand on can of cylinder and hit the bottom of the mechanism with hammer until cylinder separates from mechanism. **1min**
- 4. **Shroud** Still with the chair upside down, so the bottom is visible. Locate the seven (7) fasteners located underneath & remove. Lift the outer shroud from the seat. Grasp the back of the inner shroud and pull up, removing the inner shroud. **3min**
- 5. Metal Cover Plate Locate eight (8) fasteners located on the underside of the back and remove. 1min
- 6. **Mechanism** Locate the four (4) fasteners securing the mechanism, remove and pull mechanism & metal cover plate free. **3min**

For further dismantling, the plastic and arm cap foam from the arms and the plastic from the casters can still be removed. Steel will be left. The plastic and foam could be disposed of and the recovered metal could be recycled.