TENSION CONTROL

If the resistance of the chair is too stiff when you lean back, rotate the tension knob counter-clockwise or turn the tension knob clockwise to provide more resistance.

SEAT HEIGHT ADJUSTMENT

To raise the chair, lift the lever while lifting your weight from the seat until you reach the desired height and release the lever to lock into place. To lower the chair, lift the lever allowing your weight to push the seat down to the desired height and release the lever to lock into place.



AYLES[™] Information Guide

TILT LOCK

To adjust the recline angle, pull the paddle up to unlock it. Recline to the desired position and push the paddle down to lock into place.

CONE MECHANISM WITH CASTER AND LOUNGE BASE



Cone mechanism is available in black or aluminum



PICTURED: AYLES + OTTOMAN | MADRAS BLACK LEATHER KNEE-TILT MECHANISM | BLACK NYLON CASTER BASE