

MANTRA®

Information Guide

BACK

Mantra comes in two back heights, midback or lowback, and in two finish options, Black or Birch.

TILT LOCK

To adjust the chair tilt, push the paddle in to lock in the upright position. Pull the paddle out to unlock it for full recline.

SEAT HEIGHT ADJUSTMENT

To raise the chair, lift the paddle up while lifting your weight from the seat until you reach the desired height. Release the paddle to lock into place. To lower the chair, lift the paddle up allowing your weight to push the seat down to the desired height. Release the paddle to lock into place.

CASTER BASE

Standard nylon base available in black, birch and polished aluminum.



INSERT

An upholstered insert is optional on the midback, but required on lowback. The insert can be ordered with single or dual upholstery.

LEMNI ARM

Mantra's distinctive Lemni Arm is an integral part of the chair that connects the seat, back and arms all together. Available in polished aluminum, with an optional arm inlay in Black or Birch to match the base.

TENSION CONTROL

Leaning back in the chair, decide if the resistance of the chair is comfortable. If it is too stiff, rotate the tension knob counter-clockwise. If the chair does not provide enough resistance, turn the knob clockwise.

