


**These disassembly instructions apply to all types of TUCK Chairs  
(Stackers, Bar Stools and Counter Stools).**

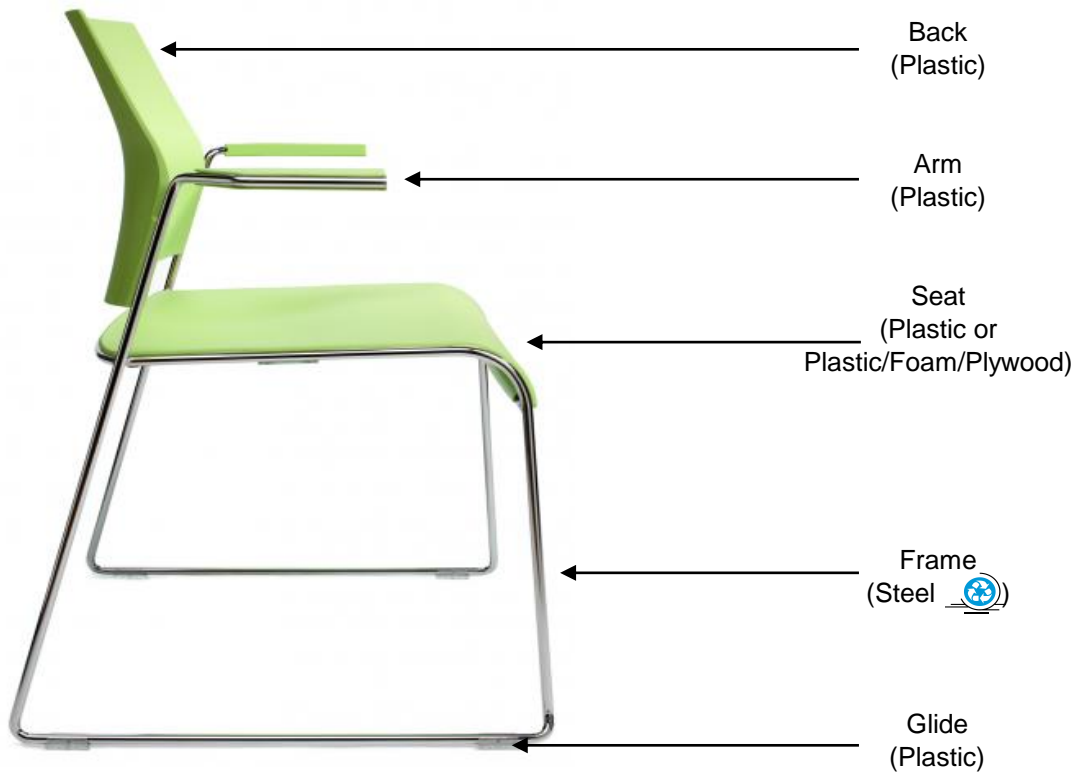

For material recycling information please refer to the Allseating End of Life Recovery Options Matrix and Allseating Matrix of Recycling Infrastructure, which is available at



Tools: #2 #3 Phillips head, Hammer or Rubber mallet, Allen key, Box cutter.  
Skill Set: Good manual dexterity.  
Estimated Time: 10min per chair.

Steps:

1. Armrest - 2min

Turn the chair upside down so the bottom of the arm set is visible. Locate the two fasteners on each arm and unfasten. Remove the arm rest from the frame.

2. Seat - 3min

Turn the chair upside down so the bottom is visible. Locate the twelve (12) fasteners located underneath and unfasten. Remove the seat panel from the chair frame.

3. Back Rest - 4min

Pull the back upward to remove back rest from the chair frame or use rubber mallet, knock the underside of the back rest. Continue to knock until the back rest is free from the frame. In upholstered seat, pry the upholstery away from the plastic with the help of box cutter.

4. Feet Glides - 1min

Once both the seat and back are removed from the frame, re-position the chair upside down to access glides. With pliers, firmly grasp the glide and wiggle upward until free. Repeat process for all four feet.