

Disassembly Instructions FOSTER Recliner

Document: CAM-323

Revision: 01

 
Date: July 17, 2015

These disassembly instructions are also applicable to Foster Recliner Wide.





(A) For material recycling information please refer to the Allseating End of Life Recovery and List of Recycling Facilities, which is available at www.allseating.com



Disassembly Instructions FOSTER Recliner

Document: CAM-323

Revision: 01

Date: July 17, 2015

Tools: #2 #3 Phillips Head, Rubber Mallet or Hammer, Allen Key

Skill Set: Good manual dexterity Estimated Time: 15min per chair

Back Rest-3min

Pull the 'relax cables' located on the side of the recliner. Locate the clamps positioned underneath the back rest and disengage. Pull back rest upward to remove from the frame.

Seat - 4min

Flip the chair on its side so the bottom is visible. Locate 4 fasteners located underneath the seat and unfasten. Pull the seat outwards to remove from the frame.

Side Panels-4min

Flip the chair on its side so the bottom is visible. Locate 6 fasteners attached to the side panel and unfasten. Pull the side panel outward to remove from the mechanism chassis. (Total 12 fasteners, 6 fasteners on each side panel)

Large Footrest – 2min

Turn the chair on its side so the bottom is visible. Locate 4 multi-screws attached to the large footrest and unfasten. Pull the large footrest outwards to remove from the mechanism.

Small Footrest - 2min

Turn the chair on its side so the bottom is visible. Locate 4 multi-screws attached to the small footrest and unfasten. Pull the small footrest outwards to remove from the mechanism.