


Disassembly Instructions EXCHANGE CHAIR

 
Document No: CDM-E1011 Issue Date: 20-Aug-18

Revision: Revised Date:

This disassembly instruction is applicable to EXCHANGE Chair.

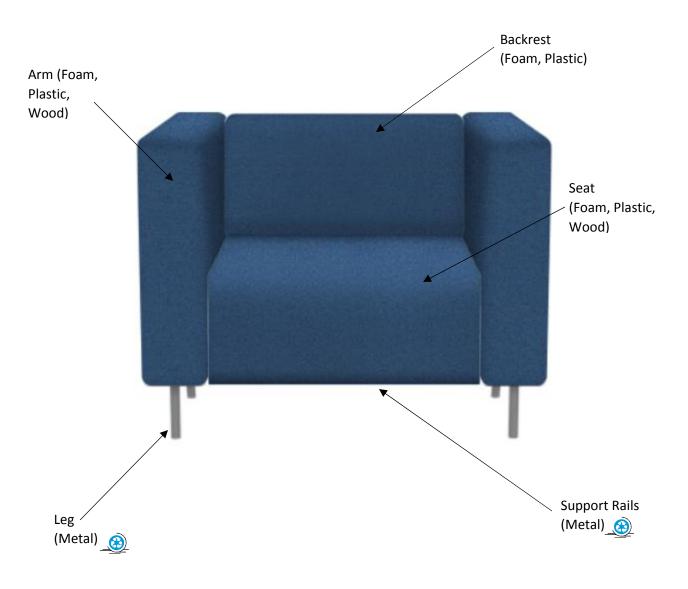

For material recycling information please refer to the End of Life Recovery Matrix and List of Recycling Facilities, which is available at www.allseating.com.



Disassembly Instructions EXCHANGE CHAIR

Document No: CDM-E1011 Issue Date: 20-Aug-18

Revision: 0

Revised Date:

Tools: #2 #3 Phillips head, Rubber mallet or hammer, Small flathead screwdriver, Allen

key, Box cutter.

Skill Set: Good manual dexterity Estimated Time: 8 minutes per chair

Steps: 1. Leg - 2min

Turn the chair over and unscrew the legs from the armrest or seat base

2. Support Rails - 6min

Locate the support rails from the underside of the chair and unscrew all fasteners that attaches the backrest, seat base, and arms.

For further dismantling, the upholstery, foam could be removed from the backrest, arms, and seat base. The foam and wood panels would be left.