




This disassembly instruction is applicable to Attune.

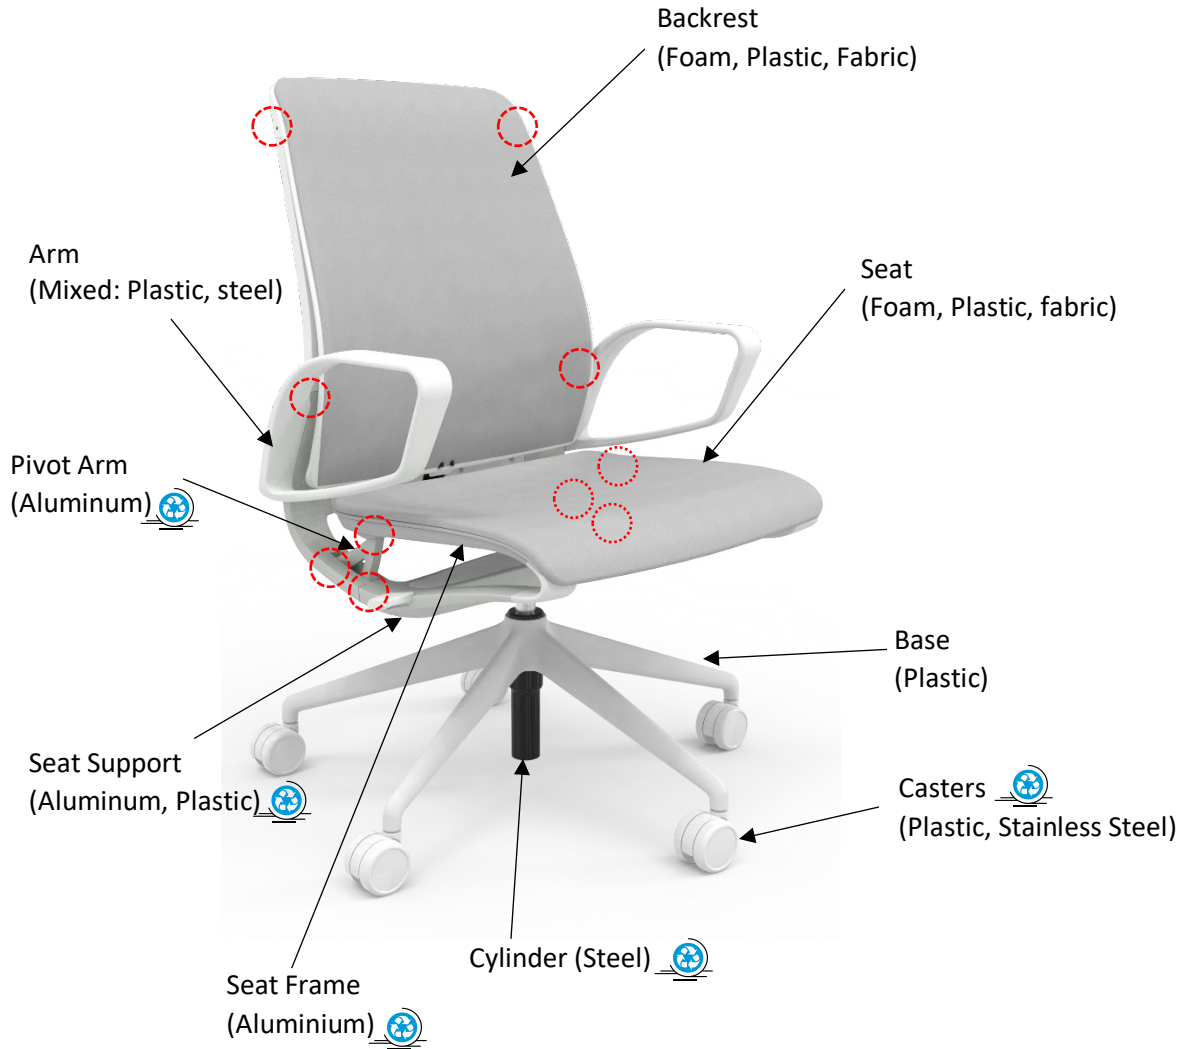



 Locations of Hex-pins



 For material recycling information please refer to the End-of-Life Recovery Matrix and List of Recycling Facilities, which is available at www.allseating.com.

This disassembly instruction is applicable to Attune.

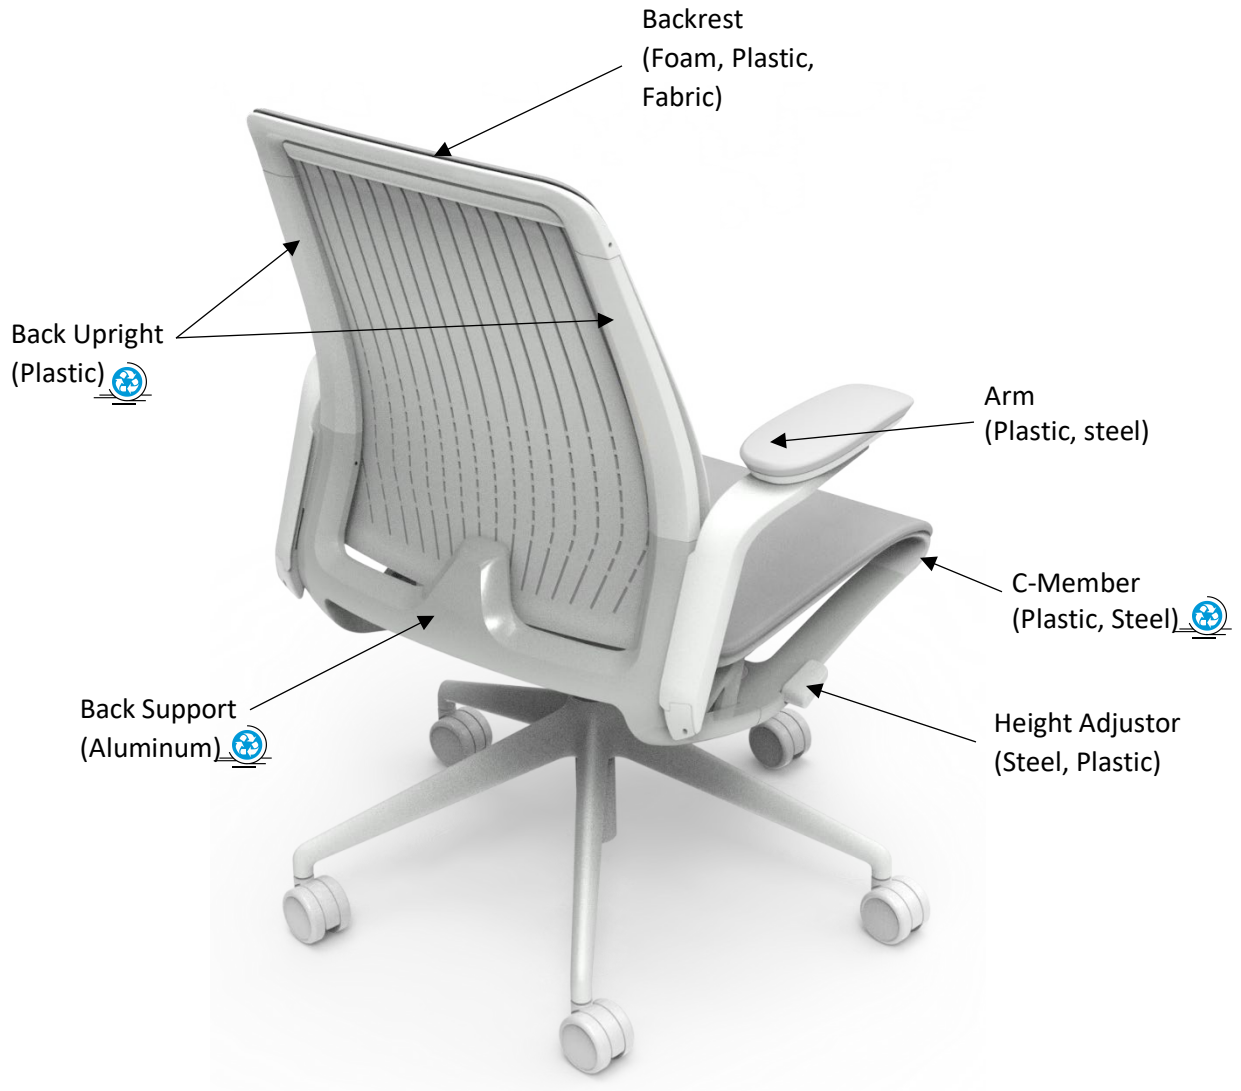

 For material recycling information please refer to the End-of-Life Recovery Matrix and List of Recycling Facilities, which is available at www.allseating.com.

Tools: Philips Screwdriver, Hex Drive Bits, Rubber Mallet or Hammer

Skill Set: Good manual dexterity

Estimated Time: approximately 8 mins. per chair

- Steps:
1. Back – 1min.
Pull the bottom part of the back from the front side of the chair (might need force to snap out the back, DO IT WITH CAUTION). Once the back is detached from the bottom, unscrew the hex pin on the top and take out the back by pulling it up.
 2. Arms and Back Uprights – 1 min.
Unscrew the 2 screws (for each arm) on the Back Support and slide out the arms. This will expose the Hex pin needed to disassemble the Back-Uprights, unscrew and pull the Back Upright up.
 3. Seat– 2 mins.
Turn the chair upside down and remove all screw (use small ratchet) that attaches the Seat to Seat Frame. Turn the chair back up and remove the Seat.
 4. Seat Frame – 30 sec.
Remove all the screws from C-Member and top Hex-pin from the Pivot arm and take out the Seat Frame.
 5. Casters, Base and Cylinder – 1 min.
Turn the chair upside down. Firmly grasp the base and pull each caster to remove it from the base. Firmly hold a leg of the base and strike the bottom of the cylinder with a rubber mallet or hammer until base comes loose. Now for Cylinder, firmly hold the cylinder with one hand and strike the Seat Support with mallet or hammer until it disassembles.
 6. Seat Support, Back Support and Pivot Arm – 2 mins.
Slide up the C-Member from the Seat Support. Remove the 2 Hex-Pin from the Pivot Arm, that will separate the Back Support and Seat Support. Remove all the screws on the Seat Support and the Back Support to separate the plastic and steel.
 7. Height Adjustor – 30 sec.
Use mallet or hammer to remove the toggle form the rod. Slide out the rod from the Seat Support.